



String INVERTERS

Single Phase 1kW - 10kW and
Three Phase 5kW - 150kW



WiFi connection & configuration Manual



Smart wifi logger Discription



-  Continues on in case of connected with local wifi network of user.
-  Continues on in case of connected with Internet through local wifi network of user.
-  Flashing in case of established communication between wifi logger and inverter.

Quick Guide for Installation of Smart wifi logger



wifi Interface connector on bottom side of inverter


- 1 Plug the intelligent wifi / GPRS logger to interface port



- 2 Tighten the nut clockwise gently, and power on inverter.


Note : Make sure, while plugging wifi logger to inverter, groove on wifi logger and inverter, both side shall be matched.

1

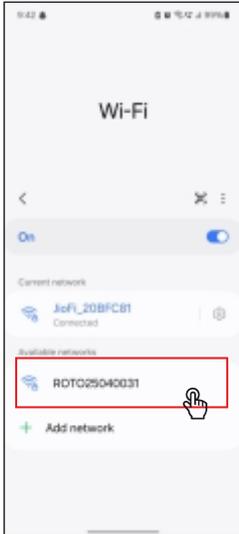


- Click on wifi tab of smart phone.
- Click on “ROTO25040031” (ROTOXXXXXXXX), showing in list of wifi network.
- “ROTO25040031” is a Serial No. of wifi logger. Every wifi logger has unique Sr.No.

2

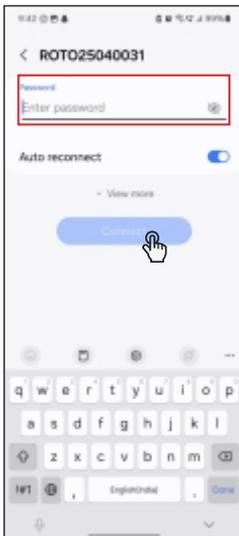


- Enter default Password “12345678” and click on “connect”.

3

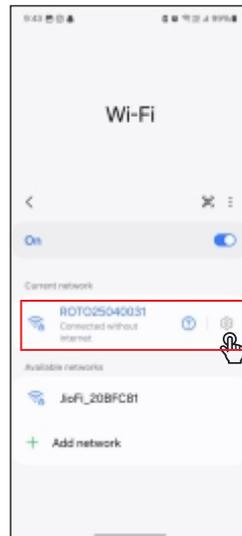


- Click on Setting icon shown in image, to configure wifi logger.

4

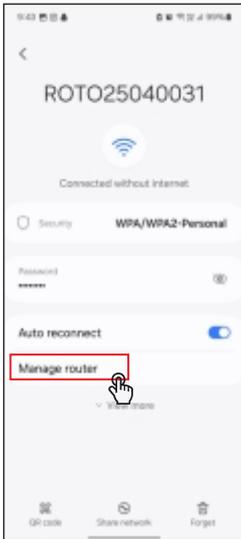


- Click on “manage router” to open web page for further configuration of wifi logger.

5

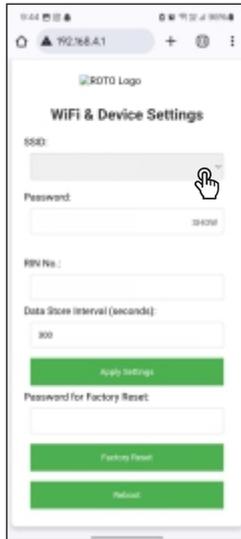


- Select local user wifi network by click on drop-down menu as shown in image.

6

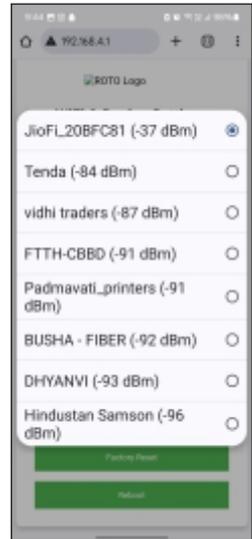


- Click on local wifi network of user.

7

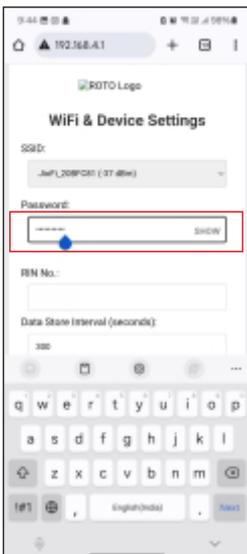

- Enter password of local wifi network of user.

8

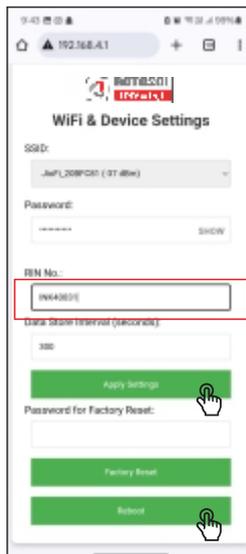

- Enter RIN No.- Available on Inverter name plate sticker.



After that click on apply settings as shown in image

Wait 2 seconds and click on “Reboot” to complete the process

9



- Wait for few seconds.
- After Reboot, page will be closed automatically after successful reboot.



ROTOMAG ENERTEC LIMITED
(Formerly known as Rotomag Motors and Controls Pvt. Ltd.)
2102/3 & 4, Vitthal Udhyognagar,
Near Anand, Gujarat - 388121, India

Email : invert@rotosol.solar
Website: www.rotosol.solar

Customer Care: 1800 1234 412